

AEG

Elegant



Digital Cordless Phone

Warning

Charge the handset for 24 hours before use.

Welcome...

to your Elegant Digital Cordless Telephone Answering Machine!

- Display with blue backlight.
- 250 Name and number phonebook.
- Copy phonebook entries between other handsets or your mobile phone SIM card.
- Answering machine with up to 13 minutes digital recording time.
- Send and receive text messages.¹
- Caller Display shows you who's calling and see details of the last 30 callers in a Calls list.²
- Register up to 5 handsets to a single base.
- Make internal calls, transfer external calls, hold 3-way conversation between two internal callers and an external caller.

¹ You must subscribe to your network provider's Caller Display Service for text messaging to work and you must not withhold your telephone number. A quarterly fee may be payable. Some other network provider lines may not be compatible with this text messaging service.

² You must subscribe to your network provider's Caller Display or Call Waiting service for these features to work. A quarterly fee may be payable.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency.

This User Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you will need to set up your phone. Follow the simple instructions in ‘Getting Started’, on the next few pages.

Need help?

You may find the answer in the ‘Help’ section at the back of this guide.

Hearing aid?

Please note that the Elegant works by sending radio signals between the base and handset.

These signals may interfere with some hearing aids, causing a humming noise.

IMPORTANT

Only use the telephone line cord supplied.

Got everything?

- Elegant base
- Elegant handset
- 2 x AAA NiMH rechargeable batteries
- Mains power adaptor for the base
- Telephone line cord

If you have purchased a Elegant multiple pack you will also have the following items for each handset:

- Elegant handset & charger
- 2 x AAA NiMH rechargeable batteries
- Mains power adaptor for charger

AEG

I. Getting started	6
1. Location	6
2. Handset range	6
3. Signal strength	6
4. Setting up	7
5. Battery low warning	7
6. Battery performance	8
7. Date and time	8
II. Getting to know your phone	9
1. Handset buttons	9
2. Standby screen	10
3. Display icons	11
4. Charger	11
5. Base	12
6. Navigating the menus	13
7. Menu map	13
8. Character map	16
III. Using the phone	16
1. Call timer	16
2. Out of range warning	16
3. Switch the handset on / off	17
4. Make a call	17
5. Preparatory dialling	17
6. End a call	17
7. Receive a call	17
8. Adjust the earpiece /receiver volume	18
9. Secrecy	18
10. Make a handsfree call	18
11. Answer a call handsfree	18
12. Switch to handsfree during a call	18
13. Redial the last number called	19

AEG

14. Redial a number from the redial list.....	19
15. Save a number from the redial list to the phonebook	19
16. Delete a redial number/delete all redial	19
17. To lock the keypad.....	19
18. To unlock the keypad.....	19
19. Paging/Find handset.....	20
IV. 250 Name and number phonebook.....	20
1. Store a name and number	20
2. View an entry	21
3. Dial an entry.....	21
4. Open the phonebook during a call.....	22
5. Edit a name and number	22
6. Edit ringtone.....	22
7. Delete an entry	23
8. Delete entire phonebook.....	23
9. Copy an entry to another handset	23
10. Copy the entire phonebook to another handset.....	23
11. Memory status	24
12. Copy an entry to a SIM card	24
13. Copy all entries to or from a SIM card	24
14. Change the dialling code	25
V. Handset settings.....	26
1. Handset ringtone	26
2. Handset ringer volume.....	26
3. Receiver volume	26
4. Handset name	27
5. Display language	27
6. Light timeout	27
7. Auto talk.....	27
8. Key beep.....	28
9. PABX access code	28

AEG

VI. Base settings	28
1. Base ringtone.....	28
2. Base ringer volume.....	29
3. Dialling mode	29
4. Ring priority.....	29
5. Recall mode.....	30
6. First ring.....	30
7. System PIN.....	31
8. Restore default settings	31
VII. Clock & alarm.....	32
1. Date & time	32
2. Set alarm	32
3. Alarm on/off	32
4. Time format	33
5. Switch off alarm ring	33
VIII. Agenda	33
1. Add a new event	33
2. Switch off agenda ring	34
3. Show agenda details	34
4. Edit agenda.....	34
5. Send agenda as a text message	35
6. Delete agenda	35
7. Delete all agendas	35
IX. Calls lists.....	36
1. Caller Display.....	36
2. Calls lists.....	36
3. New calls alert	37
4. View new missed calls.....	37
5. View and dial from a Calls list.....	37
6. Copy a Calls list number to the phonebook	37

AEG

7. Send a text message to a Calls list number	38
8. Delete an entry	38
9. Delete all entries	39
X. Call Waiting	39
XI. Network Services.....	39
1. Call Divert on/off/check.....	39
2. Call Waiting on/off/check	40
3. Add or edit an entry	40
4. Dial a stored entry.....	40
5. Delete an entry	41
6. Delete all entries	41
XII. Answering machine.....	41
1. Switch the answering machine on / off via the handset.....	41
2. Switch the answering machine on/off via the base	42
3. Answer delay	42
4. Switch message alert tone on / off.....	42
5. On-screen alert	42
6. Outgoing messages.....	43
- Answer and Record	43
- Answer Only	43
7. Record your own outgoing message via the handset.....	43
8. Check or delete your outgoing message	44
9. Select outgoing message mode via the handset.....	44
10. Select outgoing message mode via the base	44
11. Record a memo	45
12. Call screening	45
13. Message playback via the base.....	46
14. Message playback via the handset.....	46
15. Delete all old messages.....	47

AEG

16. Remote access	47
- Switch remote access On or Off	47
- Change the remote access PIN	48
- Switch your answering machine on remotely	48
17. Play messages	49
XIII. Text messaging	49
1. Cost of the fixed line service	50
2. Send a text message	50
3. Standard text entry	52
4. Receiving and reading text messages	52
5. Read a new message	52
6. Read, forward, delete, view and save numbers of texts in the Inbox	53
7. Edit or send texts in the Drafts box	54
8. Forward or delete texts in the Outbox	55
9. Edit templates	55
10. Deleting texts	56
11. Service Centre numbers	56
12. Message alert tone	57
13. Set message size	57
XIV. Using additional handsets	58
1. Registering an additional handset	58
2. Select a base	59
3. De-register a handset	59
4. Internal calls	59
- Call another handset	59
- Transfer a call	60
- 3-Way conference call	60
XV. Help	60
XVI. General information	64

AEG

I. Getting started

1. Location

You need to place your Elegant base within 2 metres of the mains power socket and telephone socket so that the cables will reach.

Make sure it is at least 1 metre away from other electrical appliances to avoid interference. Your Elegant works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Putting it as high as possible ensures the best signal.



WARNING

Do not place your Elegant in the bathroom or other humid areas.

2. Handset range

The Elegant has a range of up to 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and handset either indoors or outdoors, the range will normally be up to 50 metres. Thick stone walls can severely affect the range.

3. Signal strength

The  icon on your handset indicates when you are in range. When out of range of the base the  icon will flash and the out-of-range tone will sound every minute. This tone is repeated until you move back into range.



IMPORTANT

The base station must be plugged into the mains power at all times. Do not connect the telephone line cord into the wall socket until the handset is fully charged. Only use the power and telephone cables supplied with the product.

AEG



4. Setting up

- Connect the base

1. Plug the mains power cable into the socket marked  on the underside of the base and plug the other end into the mains power wall socket and switch the power on.
The telephone cable is pre-installed in the base but do not connect the other end to the telephone wall socket yet.
2. Rechargeable batteries are already fitted in your handset. To activate the batteries, pull the plastic tab away from the bottom of the handset as shown on the label provided.
3. Place the handset on the base to charge for at least 24 hours. The red charging light comes on. When the handset is fully charged the display shows the  icon.
4. After 24 hours, plug the telephone line cord from the base into the telephone wall socket.


- Setting up for multiple packs

If you have purchased a multiple pack, this process will need to be carried out for all handsets and chargers:

1. Plug the mains power cable into the socket marked  on the underside of the charger.
2. Activate the batteries as described previously above.
3. Place the handset on the charger to charge for at least 24 hours. When the handset is fully charged the  icon will indicate that it is fully charged.

Your Elegant is ready for use.

5. Battery low warning

If the  icon flashes in the external display you will need to recharge the handset before you can use it again.

During charging, the  icon will scroll in the display.

6. Battery performance

In ideal conditions, fully charged batteries should give about 10 hours talk time or 100 hours standby time on a single charge.

Note that new batteries do not reach full capacity until they have been in normal use for several days.

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time.

Running the batteries right down at least once a week will help them last as long as possible.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk/standby time. Eventually they will need to be replaced.

After charging your handset for the first time, subsequent charging time is about 6–8 hours a day. Batteries and handset may become warm during charging. This is normal.


7. Date and time

Providing you have subscribed to your network's Caller Display service, the date and time is set automatically for all handsets when you receive your first call. The date and time is recorded with each answering machine message you receive.

If you do not have a Caller Display service you can set the date and time manually. Please see page 32 for these instructions.

II. Getting to know your phone

1. Handset buttons

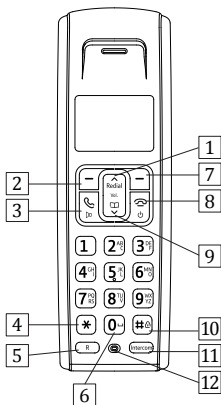


1	Redial/Up In standby, press to open and scroll through the Redial list, page 19. In talk mode, press to increase volume. In menu mode, press to scroll through the options. When storing an entry in the phonebook, press and hold to enter a Pause, page 67.	2	Option button (left) Press to open the Menu. Press to select options displayed on screen.
3	Talk/Handsfree In standby mode, press to make and receive calls, page 17. In talk mode, press to switch handsfree on and off, page 18.	4	* Press and hold to switch between Tone and Pulse dialling, page 29.
5	R (Recall) For use with switchboard/PBX.	6	0 To insert a space.

AEG

7	Option button (right) Press to select options displayed on screen. In menu mode, press to step back one screen. In standby, press « NAMES » to open the phonebook menu.	8	End/On/Off Press to end a call, page 17. In menu mode, press to return to standby. In standby, press and hold to switch the handset off. When off, press to switch the handset back on, page 17.
9	Phonebook/Down In standby, press to open and scroll through the Names list, page 20. In talk mode, press to reduce volume. In menu mode, press to scroll through the options.	10	#/Lock Press and hold to lock the keypad, page 19. To unlock, select « UNLOCK » and follow the on screen instructions.
11	Intercom Used for internal calls, page 59.	12	Microphone



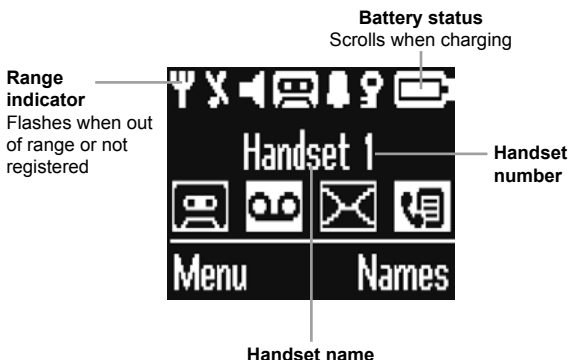









2. Standby screen




AEG

3. Display icons

** For this feature to work you must subscribe to your network provider's Caller Display service. A quarterly fee may be payable.*


- | | | | |
|--|--|---|--------------------------------------|
|  | Displayed in standby mode to indicate handset is in range of the base. Flashes if you move out of range. |  | Answering machine is On. |
|  | Shows handset battery status. |  | An alarm is set. |
|  | Scrolls when the handset is charging. |  | The keypad is locked. |
|  | Handset ringer volume is Off. |  | You have answering machine messages. |
|  | Displayed in handsfree talk mode. |  | You have new voicemails.* |
| | |  | You have SMS text messages.* |
| | |  | You have missed calls.* |

4. Charger

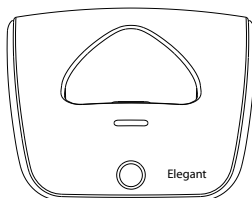

AEG

5. Base

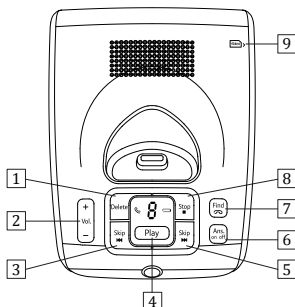

1	Delete Press once to delete the current message. At the end of all message play back, press once within 8 seconds to delete all messages.	2	Vol +/Vol - Increase or decrease speaker volume during play back.
3	<< Skip Press once to repeat the current message, twice to play the previous message.	4	Play/Pause Play/pause messages.
5	Skip >> Skip forward to the next message.	6	Ans. On/Off Switch answering machine on or off.
7	Find Press to ring all registered handsets, helpful for finding a missing handset, page 20.	8	Stop Stop play back.
9	SIM Card slot		

AEG

6. Navigating the menus

Your Elegant has an easy to use menu system.

Each menu has a list of options, which you can see on the menu map below and on the following pages.

When the handset is switched on and in standby:

1. Press « **MENU** » to open the main menu.
2. Then use **Redial/Up** or **Phonebook/Down** buttons to scroll through the available options.
3. Press the « **SELECT** » option button to select a menu option or the « **BACK** » option button to go back to the previous screen.
To return to the previous menu level, press « **BACK** ».
To exit the menu and return to standby press **End/On/Off**.

Note: If no buttons are pressed for 30 seconds, the handset returns to standby automatically.

7. Menu map

TEXT MESSAGING	<ul style="list-style-type: none">- WRITE MESSAGE- INBOX- DRAFTS- OUTBOX- TEMPLATES- DELETE MESSAGES- TEXT SETTINGS	
ANSWER MACHINE	<ul style="list-style-type: none">- PLAY- PLAY ALL- ANSWER ON/OFF- RECORD MEMO- OUTGOING MESSAGE- DELETE MESSAGES- ANSWER SETTINGS	

AEG

CALL LISTS	<ul style="list-style-type: none"> - MISSED CALLS - RECEIVED CALLS - DIALLED CALLS - DELETE CALLS 	
AGENDA	<ul style="list-style-type: none"> - ADD EVENT <p>The following options will only be displayed once an event has been stored:</p> <ul style="list-style-type: none"> - ADD EVENT - SHOW DETAILS - EDIT EVENT - SEND AS A TEXT - DELETE EVENT - DELETE ALL EVENTS 	
NETWORK SERVICES	<ul style="list-style-type: none"> - DIVERT ON - DIVERT OFF - DIVERT CHECK - C WAIT ON - C WAIT OFF - C WAIT CHECK 	
CLOCK & ALARM	<ul style="list-style-type: none"> - DATE & TIME - ALARM - TIME FORMAT 	
SETTINGS	<ul style="list-style-type: none"> - SET HANDSET 	<ul style="list-style-type: none"> - RINGTONE - RINGER VOLUME - RECEIVER VOLUME - HANDSET NAME - LANGUAGE - LIGHT TIMEOUT - AUTO TALK - KEY BEEP - PABX ACCESS CODE

AEG

SETTINGS (cont'd)	<ul style="list-style-type: none"> - SET BASE 	<ul style="list-style-type: none"> - <i>RINGTONE</i> - <i>RINGER VOLUME</i> - <i>DIALLING MODE</i> - <i>RING PRIORITY</i> - <i>RECALL MODE</i> - <i>FIRST RING</i> - <i>SYSTEM PIN</i> - <i>MASTER RESET</i>
REGISTRATION	<ul style="list-style-type: none"> - REGISTER HANDSET - SELECT BASE - DE-REGISTER 	
NAMES menu	<p>From menu in standby:</p> <ul style="list-style-type: none"> - SEARCH - ADD ENTRY - COPY PHONEBOOK - DIALLING CODES - MEMORY STATUS - DELETE PHONEBOOK <p>Press Phonebook/Down in standby:</p> <p>« PHONEBOOK EMPTY » will be displayed if no entries are stored.</p> <p>Select « OPTIONS » and the following list is displayed:</p> <ul style="list-style-type: none"> - SHOW DETAILS - SEND MESSAGE - EDIT ENTRY - COPY ENTRY - RINGTONE - DELETE ENTRY 	
Press « NAMES » during a call:	<p>Phonebook list is displayed.</p> <ul style="list-style-type: none"> - ADD ENTRY - SHOW DETAILS - EDIT ENTRY - DELETE ENTRY 	

AEG

8. Character map

Button	Lowercase	Uppercase
1	. , - ? ! j ð ' @ : ; / 1	
2	a b c 2 ä æ å à ç	A B C 2 Ä Æ Å Ç
3	d e f 3 è é	D E F 3 É
4	g h i 4 ì	G H I 4
5	j k l 5	J K L 5
6	m n o 6 ö ø ò ñ	M N O 6 Ö Ø Ñ
7	p q r s 7 ß	P Q R S 7
8	t u v 8 ù ü	T U V 8 Ü
9	w x y z 9	W X Y Z 9
0	0 _ (= space)	
*	bring up symbol table (in SMS edition mode)	
#	short press to switch between Abc, abc, ABC and 123 mode	

III. Using the phone

1. Call timer

Your handset will automatically time the duration of all external calls. The handset display shows the call duration both during and for a few seconds after your call.

During a call, you can open the phonebook by pressing « **NAMES** ».

2. Out of range warning

When the handset moves out of range of the base, the screen shows « **SEARCHING...** » the **Ψ** flashes and the handset gives a warning beep.

If you are on a call, the line will hang up. Move back within in range. The handset will automatically re-connect to the base.

AEG

3. Switch the handset on / off

1. In standby, press and hold **End/On/Off** to switch the handset off.
When off, press **End/On/Off** to switch back on, or put the handset back on its base.

4. Make a call

When you make a call, the green In Use light on the base flashes.

1. Press **Talk/Handsfree**.
2. When you hear the dial tone, dial the number.

5. Preparatory dialling

1. Dial the number first. If you make a mistake press « **CLEAR** » to delete the last digit.
2. Press **Talk/Handsfree** to dial.

6. End a call

1. Press **End/On/Off**.

7. Receive a call

When you receive an external call, the phone rings. The display shows « **EXTERNAL CALL** » and the caller's number or, if the number matches an entry stored in the phonebook, the name is displayed.

To answer the call:

1. If your handset is on the base and Auto Talk is on, pick up the handset.
Or
If your handset is on the base and Auto Talk is off, pick up the handset and press **Talk/Handsfree**.
Or
If your handset is off the base, press **Talk/Handsfree**.

*Note: If auto talk is set to ON you can just pick the handset up to answer a call. If you have switched auto talk off, you will need to press **Talk/Handsfree** as well. Auto Talk ON is the default setting. To switch Auto Talk on and off, see page 27.*

AEG

8. Adjust the earpiece /receiver volume

There are 8 volume settings, the default setting is level 1.

1. During a call, press **Redial/Up** or **Phonebook/Down** to change the volume. The display shows the level.


9. Secrecy

1. During a call, press « **SECRECY** ». The display shows « **SECRECY ON** » and your caller cannot hear you.
2. Press « **OFF** » to return to your caller.

Note: During a call, you can use the secrecy function to talk to someone nearby without your caller hearing.

10. Make a handsfree call

Handsfree lets you talk to your caller without holding the handset. It also enables other people in the room to listen to your conversation over the loudspeaker.

1. Dial the number then press **Talk/Handsfree**.
2. Press **Talk/Handsfree** again. The  icon is displayed and you hear your call over the handset loudspeaker. Press **Talk/Handsfree** to switch the call between the earpiece and the loudspeaker.
3. Press **End/On/Off** to end the call.

*Note: During a handsfree call, press **Redial/Up** or **Phonebook/Down** to change the volume.*

11. Answer a call handsfree

When the phone rings:

1. Press **Talk/Handsfree** twice to answer the call.

12. Switch to handsfree during a call

1. During a call, press **Talk/Handsfree** to put the call on the loudspeaker. To switch handsfree off and return the call to the earpiece, press **Talk/Handsfree** again.

AEG

13. Redial the last number called

The last 20 telephone numbers called are saved to a redial list. You can then select any of the numbers to redial, delete or copy to the phonebook.

Redial numbers can be up to 32 digits long.

1. Press **Redial/Up** the last number you called is highlighted.
2. Press **Talk/Handsfree** to dial.

14. Redial a number from the redial list

1. Press **Redial/Up** the last number you called is displayed.
2. Press **Redial/Up** or **Phonebook/Down** to scroll to the number you want.
3. Press **Talk/Handsfree** to dial.

15. Save a number from the redial list to the phonebook

Please see page 37 for instructions, "Copy a Calls list number to the phonebook", and select the « **DIALLED CALLS** » option.

16. Delete a redial number/delete all redial

Please see page 38 for instructions and select the « **DIALLED CALLS** » option.

17. To lock the keypad

You can lock the keypad so that it cannot be used accidentally while carrying it around. You will be able to dial the emergency numbers 999 and 112.

1. Press and hold **#/Lock**. The  icon is displayed.

Important

When the keypad is locked you can still answer incoming calls and operate the handset as normal. When the call is ended, the keypad lock comes on again.

18. To unlock the keypad

1. Press « **UNLOCK** ». Display shows « **PRESS # TO UNLOCK KEYS** ».
2. Press **#/Lock** within a second.

AEG

19. Paging/Find handset

You can alert a handset user that they are wanted or locate a missing handset. Paging calls cannot be answered by a handset.

1. Press **Find** on the base. All handsets registered to the base will ring and display « **PAGING CALL** ».
2. Press **Find** on the base again to stop the ringing or, on any handset, press « **STOP** » or any button on the handset to stop all handsets ringing.

IV. 250 Name and number phonebook

You can store up to 250 names and numbers in the phonebook. Names can be up to 12 characters long and numbers up to 24 digits. You can also select different ring tones for phonebook entries.

1. Store a name and number

If you subscribe to a Caller Display Service and want the name of your caller displayed instead of the number service, enter the full telephone number including the dialling code.

You can store multiple entries with the same name but, to prevent unnecessary duplicates, only store the same number once.

1. From standby, press « **NAMES** ». The phonebook menu is displayed.
2. « **SEARCH** » is highlighted. Scroll **Phonebook/Down** to « **ADD ENTRY** » and press « **SELECT** ».
3. Enter the name and press « **OK** ».
4. Enter the number and press « **SAVE** ».
5. Scroll **Redial/Up** or **Phonebook/Down** to the ringtone you want and press « **SELECT** ». The display shows « **<NAME> SAVED** » and returns to the phonebook menu.
6. Press « **BACK** » to return to the previous menu level.

AEG

- Entering names

Use the keypad letters to enter names, e.g. to store TOM:

Press **8** once to enter T.

Press **6** three times to enter O.

Press **6** once to enter M.

When storing a name the first character is upper case and the rest lower case.

To change the case manually, press **#/Lock**.

To store Pause, press and hold **Redial/Up**.

To store a Recall, press **R** (this can only be done for « **TIMED BREAK** »).

- Writing tips

Press « **CLEAR** » to delete the last character or digit.

Press **Redial/Up** or **Phonebook/Down** to move backwards or forwards through character/digits.

Press **#/Lock** to switch between upper and lower case.

Press **0** to insert a space.

Use **0** or **1** for other punctuation characters.

You must enter a name to go with a number or the entry will not be saved.

2. View an entry

1. Press **Phonebook/Down**. The first entry is displayed.
2. Scroll **Redial/Up** or **Phonebook/Down** to the entry you want or search alphabetically.
3. Press « **OPTIONS** ». The display highlights « **SHOW DETAILS** ».
4. Press « **SELECT** » to display the name, number and ringtone.
5. Press « **DIAL** » to call the number or « **BACK** » to return to the previous level.

3. Dial an entry

1. In standby, press **Phonebook/Down**. The first entry is displayed.
2. Scroll **Redial/Up** or **Phonebook/Down** to the entry you want or search alphabetically.
3. Press **Talk/Handsfree** to dial the displayed number.

AEG

- Search alphabetically

Press **Phonebook/Down**.

Or

Press « **NAMES** ». « **SEARCH** » is highlighted. Press « **SELECT** ». The list of entries are displayed.

Enter the first letter of the name you want. The first name beginning with that letter is displayed.

Scroll **Phonebook/Down** to view any other entries beginning with that letter.

4. Open the phonebook during a call

1. During your conversation, press « **NAMES** ».
2. Use the menu to select « **ADD ENTRY** », « **SHOW DETAILS** », « **EDIT ENTRY** » or « **DELETE ENTRY** ».

5. Edit a name and number

1. Press **Phonebook/Down**.
2. Scroll **Redial/Up** or **Phonebook/Down** to the entry you want.
3. Press « **OPTIONS** » and scroll **Phonebook/Down** to « **EDIT ENTRY** » and press « **SELECT** ».
4. Press « **CLEAR** » to delete characters, use the keypad to enter new ones then press « **OK** ».
5. Press « **CLEAR** » to delete digits, use the keypad to enter new ones then press « **SAVE** ».
6. Scroll **Redial/Up** or **Phonebook/Down** to the ringtone you want and press « **SELECT** » to save the entry.
7. Press « **BACK** » to return to the previous menu level.

6. Edit ringtone

1. Press **Phonebook/Down**.
2. Scroll **Redial/Up** or **Phonebook/Down** to the entry you want.
3. Press « **OPTIONS** » and scroll **Phonebook/Down** to « **RINGTONE** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to the ringtone you want and select « **OK** » to save the entry.
5. Press « **BACK** » to return to the previous menu level.

AEG

7. Delete an entry

1. Press **Phonebook/Down**.
2. Scroll **Redial/Up** or **Phonebook/Down** to the entry you want.
3. Press « **OPTIONS** » and scroll **Phonebook/Down** to « **DELETE ENTRY** » and press « **SELECT** ».
4. Press « **YES** » to confirm or « **NO** » to cancel.
5. Press « **BACK** » to return to the previous menu level.

8. Delete entire phonebook

1. Press « **NAMES** ».
2. Scroll **Redial/Up** or **Phonebook/Down** to « **DELETE PHONEBOOK** » and press « **SELECT** ».
3. Press « **YES** » to confirm or « **NO** » to cancel.
4. Press « **BACK** » to return to the previous menu level.

9. Copy an entry to another handset

When you have more than one handset registered to your Elegant base, you can copy entries between handsets.

1. Press **Phonebook/Down**.
2. Scroll **Redial/Up** or **Phonebook/Down** to the entry you want.
3. Press « **OPTIONS** » and scroll **Phonebook/Down** to « **COPY ENTRY** » and press « **SELECT** ».
4. « **TO HANDSET** » is displayed. Press « **SELECT** ».
5. Available handsets are displayed. Scroll **Redial/Up** or **Phonebook/Down** to the handset you want and press « **SELECT** ». « **COPY PHONEBOOK?** » is prompted on the receiving handset. Press « **YES** » to accept or « **NO** » to cancel. When completed the display shows « **1 ENTRY COPIED** ».
6. Press « **BACK** » to return to the previous menu level.

10. Copy the entire phonebook to another handset

In just a few minutes, you can copy all your phonebook contacts to another handset.

At the handset you are copying from:

1. Press « **NAMES** ».

AEG

2. Scroll **Phonebook/Down** to « **COPY PHONEBOOK** » and press « **SELECT** ».
3. « **TO HANDSET** » is displayed. Press « **SELECT** ».
4. Available handsets are displayed. Scroll **Redial/Up** or **Phonebook/Down** to the handset you want and press « **SELECT** ». When completed the display shows the number of entries copied.
5. Press « **BACK** » to return to the previous menu level.

At the receiving handset:

The display shows « **COPY PHONEBOOK?** ». Press « **YES** » to begin copying or « **NO** » to cancel.

11. Memory status

You can check how much of the phonebook memory is available.

1. Press « **NAMES** ».
2. Scroll **Phonebook/Down** to « **MEMORY STATUS** » and press « **SELECT** ».
3. Display shows the number of « **USED** » and « **FREE** » entries.
4. Press « **BACK** » to return to the previous menu level.

12. Copy an entry to a SIM card

1. Insert the SIM card into the SIM READER slot on the side of the base.
2. Press **Phonebook/Down** to open the phonebook list then press « **OPTIONS** ».
3. Scroll **Phonebook/Down** to « **COPY ENTRY** » and press « **SELECT** ».
4. Scroll **Phonebook/Down** to « **TO SIM** » and press « **SELECT** ».
5. If requested, enter your SIM PIN then press « **OK** ».
6. Display shows « **PLEASE WAIT...X%** » as it copies entries from the SIM. When completed the display shows « **<NAME> COPIED** ».
7. Press « **BACK** » to return to the previous menu level.

13. Copy all entries to or from a SIM card

1. Insert the SIM card into the SIM READER slot on the side of the base.
2. Press « **NAMES** ».
3. Scroll **Phonebook/Down** to « **COPY PHONEBOOK** » and press « **SELECT** ».
4. Scroll **Phonebook/Down** to either « **FROM SIM** » or « **TO SIM** » and press « **SELECT** ».
5. If requested, enter your SIM PIN then press « **OK** ».
6. Display shows « **COPYING** » and the name of each entry. When completed the display shows the number of entries.

AEG

7. Press « **BACK** » to return to the previous menu level.

Notes: The PIN number will be displayed as asterisks for security reasons.

While copying to another handset or SIM card, any other handsets registered to the base can still make and receive phone calls as normal.

However, if an incoming call is received, the copying process is cancelled so that the call can be taken.

*If the memory becomes full during copying from a SIM, the display shows « **MEMORY FULL NOT ALL COPIED** ».*

*Most SIM cards are supported, but if the SIM Card format is not compatible, the display shows « **SIM FORMAT NOT SUPPORTED** ».*

When copying from a SIM only the first 12 characters of each name are copied and the first 24 digits in a number are copied.

If an entry with a duplicate number is found, the entry will not be copied.

*« **PLEASE INSERT SIM CARD** » will be displayed if you have not already inserted a SIM card into the base.*

14. Change the dialling code

The Dialling Codes function automatically converts SIM entries beginning with international dialling codes to the local code. For example, on a SIM card, + is the international code and 44 is the country code. These will be replaced automatically by the local code 0 so that a number beginning +44207 will be converted to 0207.

1. Press « **NAMES** ».
2. Scroll **Phonebook/Down** to « **DIALLING CODES** » and press « **SELECT** ».
3. Scroll **Phonebook/Down** to the part of the dialling code you need to change, « **INTERNATIONAL** », « **COUNTRY** » or « **LOCAL** » and press « **SELECT** ».
4. Enter the new code and press « **SAVE** ».
5. Press « **BACK** » to return to the previous menu level.

V. Handset settings

1. Handset ringtone

You can set different ringtones for external calls and internal calls. Select from 20 handset ringtones. You will hear a sample ring for each one you highlight (if the ringer is not switched off).

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. « **SET HANDSET** » is highlighted. Press « **SELECT** ».
3. « **RINGTONE** » is highlighted. Press « **SELECT** ».
4. Press **Redial/Up** or **Phonebook/Down** to highlight « **EXTERNAL CALL** » or « **INTERNAL CALLS** ». Press « **SELECT** » to confirm.
5. Scroll **Redial/Up** or **Phonebook/Down** to highlight the ringtone you want.
6. Press « **SELECT** » to confirm.
7. Press « **BACK** » to return to the previous menu level.

2. Handset ringer volume

This sets the standard volume level for the handset earpiece. There are 8 levels to choose from. The handset has 5 ringer volume settings plus Off.

If the volume is set to Off the **X** icon is displayed. The default setting is level 5.

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. « **SET HANDSET** » is highlighted. Press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **RINGER VOLUME** » and press « **SELECT** ».
4. Press **Redial/Up** or **Phonebook/Down** to display the volume level you want. Press « **SELECT** » to confirm.
5. Press « **BACK** » to return to the previous menu level.

3. Receiver volume

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. « **SET HANDSET** » is highlighted. Press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **RECEIVER VOLUME** » and press « **SELECT** ».
4. Press **Redial/Up** or **Phonebook/Down** to display the volume level you want. Press « **SELECT** » to confirm.
5. Press « **BACK** » to return to the previous menu level.

AEG

4. Handset name

If you are using more than one handset with your Elegant base, you can give each handset a personalised name to easily distinguish between the handsets. A name can be up to 10 characters long.

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. « **SET HANDSET** » is highlighted. Press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **HANDSET NAME** » and press « **SELECT** ».
4. Use the keypad to enter the name and press « **SAVE** ».
5. Press « **BACK** » to return to the previous menu level.

5. Display language

The available languages include: English, Francais, Deutsch, Italiano and Espanol.

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. « **SET HANDSET** » is highlighted. Press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **LANGUAGE** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to the language you want and press « **SELECT** ».
5. Press « **BACK** » to return to the previous menu level.

6. Light timeout

Set how long the backlight stays on after the last button press.

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. « **SET HANDSET** » is highlighted. Press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **LIGHT TIMEOUT** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to set the timeout period you want then press « **SELECT** ».
5. Press « **BACK** » to return to the previous menu level.

7. Auto talk

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. « **SET HANDSET** » is highlighted. Press « **SELECT** ».

AEG

3. Scroll **Phonebook/Down** to « **AUTO TALK** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to « **ON** » or « **OFF** » then press « **SELECT** ».
5. Press « **BACK** » to return to the previous menu level.

8. Key beep

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. « **SET HANDSET** » is highlighted. Press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **KEY BEEP** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to « **OFF** » or « **ON** » then press « **SELECT** ».
5. Press « **BACK** » to return to the previous menu level.

9. PABX access code

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. « **SET HANDSET** » is highlighted. Press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **PABX ACCESS CODE** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to « **ON** », « **OFF** » or « **SET CODE** » then press « **SELECT** ».
If you select « **SET CODE** », enter the switchboard access code e.g. 9 then press « **SAVE** ».
5. Press « **BACK** » to return to the previous menu level.

VI. Base settings

1. Base ringtone

Select from 5 base ringtones. You will hear a sample ring for each one you highlight (if the ringer is not switched off).

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **SET BASE** » and press « **SELECT** ».
3. « **RINGTONE** » is highlighted. Press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to highlight the ringtone you want.

AEG

5. Press « **SELECT** » to confirm.
6. Press « **BACK** » to return to the previous menu level.

2. Base ringer volume

The base has 5 ringer volume settings plus Off. The default setting is level 5.

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **SET BASE** » and press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **RINGER VOLUME** » and press « **SELECT** ».
4. Press **Redial/Up** or **Phonebook/Down** to display the volume level you want. Press « **SELECT** » to confirm.
5. Press « **BACK** » to return to the previous menu level.

3. Dialling mode

Your Elegant is pre-set to Tone dialling. You should not normally need to change this setting. The dial mode options are Tone (Time Break/ Earth) or Pulse (Earth).

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **SET BASE** » and press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **DIALLING MODE** » and press « **SELECT** ».
4. Press **Redial/Up** or **Phonebook/Down** to highlight « **PULSE** » or « **TONE** » then press « **SELECT** » to confirm.
5. Press « **BACK** » to return to the previous menu level.

4. Ring priority

When you have more than one handset registered to your base, you can set one handset to ring before the other handsets. This allows one handset user to answer all incoming first, like a receptionist.

Choose « **ALL HANDSETS** » if you want all handsets to ring at the same time or « **SELECT HANDSET** » to nominate a handset to ring two times before the others. The default setting is « **ALL HANDSETS** ».

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **SET BASE** » and press « **SELECT** ».

AEG

3. Scroll **Phonebook/Down** to « **RING PRIORITY** » and press « **SELECT** ».
4. Press **Redial/Up** or **Phonebook/Down** to highlight « **ALL HANDSETS** » or « **SELECT HANDSET** » then press « **SELECT** ».
If you choose « **SELECT HANDSET** » all available handsets are displayed. Scroll **Redial/Up** or **Phonebook/Down** to highlight the handset you want then press « **SELECT** ».
Scroll **Redial/Up** or **Phonebook/Down** to the number of rings you want to set 2, 4 or 6 and press « **SELECT** ».
5. Press « **BACK** » to return to the previous menu level.

5. Recall mode

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **SET BASE** » and press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **RECALL MODE** » and press « **SELECT** ».
4. Press **Redial/Up** or **Phonebook/Down** to highlight « **TIMED BREAK** » or « **EARTH** » then press « **SELECT** » to confirm.
5. Press « **BACK** » to return to the previous menu level.

6. First ring

If you have subscribed to your network's Caller Display service, your Elegant does not ring until the caller information has been received and displayed.

However, if you want your handset to ring without waiting for the caller information to be displayed, set First Ring to On. Please note that this will mean the first ring you hear will be the default ringtone. This will change to any ringtone you have set once the caller information is displayed.

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **SET BASE** » and press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **FIRST RING** » and press « **SELECT** ».
4. Press **Redial/Up** or **Phonebook/Down** to « **ON** » or « **OFF** » then press « **SELECT** » to confirm.
5. Press « **BACK** » to return to the previous menu level.

AEG

7. System PIN

The System PIN is used when changing certain settings and registration / de-registration. The default setting is 0000. You can change this to your own preferred number up to 8 digits.

When you enter a PIN the digits are shown as ****.

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **SET BASE** » and press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **SYSTEM PIN** » and press « **SELECT** ».
4. Enter the old PIN (original setting 0000) and press « **OK** ».
5. Enter the new PIN and press « **OK** ».
6. Re-enter the new PIN and press « **OK** ».
7. Press « **BACK** » to return to the previous menu level.

8. Restore default settings

You can restore your Elegant to its default (original) settings.

It will not affect the phonebook, calls list or user's data, including personal/ recorded outgoing messages and answer machine messages.

All handsets registered to the base will be retained.

All text, answer machine, handset and base settings will be reset.

1. Press « **MENU** », scroll **Phonebook/Down** to « **SETTINGS** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **SET BASE** » and press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **MASTER RESET** » and press « **SELECT** ».
4. Select « **YES** » to confirm or « **NO** » to cancel.
5. Enter the system PIN (original setting 0000) then press « **OK** ». The display will show « **RESET COMPLETE** » then return to standby.

VII. Clock & alarm


1. Date & time

If you subscribe to your network's caller display service, the base sets the date and time for all handsets whenever a call is received. You can manually set the time on an individual handset.

1. Press « **MENU** », scroll **Phonebook/Down** to « **CLOCK & ALARM** » and press « **SELECT** ».
2. « **DATE & TIME** » is highlighted, press « **SELECT** ».
3. Enter the date using the format DD/MM/YY and press « **SAVE** ».
4. Enter the time and press « **SAVE** ».
5. Press « **BACK** » to return to the previous menu level.

Note: You can set the time to either 12 or 24 hour format, see page 33.

2. Set alarm

When the alarm is set, the display shows the  icon.

Each handset can have a different alarm setting.


1. Press « **MENU** », scroll **Phonebook/Down** to « **CLOCK & ALARM** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **ALARM** » and press « **SELECT** ».
3. Press **Redial/Up** or **Phonebook/Down** to select « **ON** » and press « **SELECT** ».
4. Press **Redial/Up** or **Phonebook/Down** to select « **ONCE** », « **MON-FRI** » or « **ON DAILY** » and press « **SELECT** ».
5. Enter the time you want the alarm and press « **SAVE** ».
6. Press « **BACK** » to return to the previous menu level.

3. Alarm on/off

Once an alarm has been set, you can switch the setting on or off.

If the alarm was set to « **ONCE** » the  will disappear from the screen.

If set to « **ON DAILY** » or « **MON-FRI** » the  will remain on the screen.

If you are using the handset to make a call when the alarm ring is due, the  flashes and you hear a beep in the earpiece.

AEG

1. Press « **MENU** », scroll **Phonebook/Down** to « **CLOCK & ALARM** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **ALARM** » and press « **SELECT** ».
3. Press **Redial/Up** or **Phonebook/Down** to select « **ON** » or « **OFF** » and press « **SELECT** ».
4. Press « **BACK** » to return to the previous menu level.

4. Time format

Set the time format to 12 or 24 hour setting.

1. Press « **MENU** », scroll **Phonebook/Down** to « **CLOCK & ALARM** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **TIME FORMAT** » and press « **SELECT** ».
3. Press **Redial/Up** or **Phonebook/Down** to select « **12 HOUR** » or « **24 HOUR** » and press « **SELECT** ».
4. Press « **BACK** » to return to the previous menu level.

5. Switch off alarm ring

1. When the alarm goes off, press « **STOP** ».

VIII. Agenda

Use your Elegant to remind you of details of up to five events such as birthdays, anniversaries or appointments. The entry can be up to 24 characters long.

1. Add a new event

Up to 24 characters can be entered as the subject.

1. Press « **MENU** », scroll **Phonebook/Down** to « **AGENDA** » and press « **SELECT** ».
2. If no previous event is stored, « **ADD EVENT** » is highlighted press « **SELECT** ».
Or
If events are already stored, they are listed. Press « **OPTIONS** ». « **ADD EVENT** » is highlighted. Press « **SELECT** ».
3. Enter the subject and press « **SAVE** ».
4. Enter the date (DD/MM) and press « **SAVE** ».
5. Enter the time (HH:MM) and press « **SAVE** ». If the current time format setting is 12 hour, select am or pm by pressing **Redial/Up** or **Phonebook/Down**.

AEG

6. Press **Redial/Up** or **Phonebook/Down** to select « **SILENT** » or « **ALARM** » and press « **SELECT** ».

If you press « **ALARM** »:

Scroll **Redial/Up** or **Phonebook/Down** to select « **ONCE** » or « **ANNUALLY** » and press « **SELECT** ».

Scroll **Redial/Up** or **Phonebook/Down** to select when you want to receive the reminder « **AT EVENT TIME** » or « **30 MIN BEFORE** », press « **SELECT** ». Display shows « **SAVED** ».

7. Press « **BACK** » to return to the previous menu level.

Notes: If you select a silent reminder, the event subject is displayed on screen but no alarm will sound.

*When the event memory is full, the display shows « **MEMORY FULL** ». You must delete an event before you can add a new one.*

2. Switch off agenda ring

1. The event is displayed. Press « **VIEW** » to stop the alarm and see the details of the event. Or press « **BACK** » to stop the alarm and return to the standby screen. If no button is pressed, the alarm stops after one minute.

3. Show agenda details

1. Press « **MENU** », scroll **Phonebook/Down** to « **AGENDA** » and press « **SELECT** ».
2. Stored events are displayed. If required, scroll **Phonebook/Down** to the event you want and press « **OPTIONS** ».
3. Scroll **Phonebook/Down** to « **SHOW DETAILS** » and press « **SELECT** ». The description, date and time of the reminder are displayed.
4. Press « **BACK** » to return to the previous menu level.

4. Edit agenda

1. Press « **MENU** », scroll **Phonebook/Down** to « **AGENDA** » and press « **SELECT** ».
2. Stored events are displayed. If required, scroll **Phonebook/Down** to the event you want and press « **OPTIONS** ».
3. Scroll **Phonebook/Down** to « **EDIT EVENT** » and press « **SELECT** ».
4. Edit the subject and press « **SAVE** ».
5. Edit the date and time then press « **SAVE** ».

AEG

6. Press **Redial/Up** or **Phonebook/Down** to select « **SILENT** » or « **ALARM** » and press « **SELECT** ».

If you press « **ALARM** »:

Scroll **Redial/Up** or **Phonebook/Down** to select « **ONCE** » or « **ANNUALLY** » and press « **SELECT** ».

Scroll **Redial/Up** or **Phonebook/Down** to select when you want to receive the reminder « **AT EVENT TIME** » or « **30 MIN BEFORE** », press « **SELECT** ». Display shows « **SAVED** ».

7. Press « **BACK** » to return to the previous menu level.

5. Send agenda as a text message

1. Press « **MENU** », scroll **Phonebook/Down** to « **AGENDA** » and press « **SELECT** ».
2. Stored events are displayed. Scroll **Phonebook/Down** to the event you want and press « **OPTIONS** ».
3. Scroll **Phonebook/Down** to « **SEND AS A TEXT** » and press « **SELECT** ».
4. The event is displayed. Press « **OPTIONS** » to select « **SEND** » option and enter a destination number.

6. Delete agenda

1. Press « **MENU** », scroll **Phonebook/Down** to « **AGENDA** » and press « **SELECT** ».
2. Stored events are displayed. Scroll **Phonebook/Down** to the event you want and press « **OPTIONS** ».
3. Scroll **Phonebook/Down** to « **DELETE EVENT** » and press « **SELECT** ».
4. Press « **YES** » to confirm or « **NO** » to cancel.
5. Press « **BACK** » to return to the previous menu level.

7. Delete all agendas

1. Press « **MENU** », scroll **Phonebook/Down** to « **AGENDA** » and press « **SELECT** ».
2. Stored events are displayed. Press « **OPTIONS** ».
3. Scroll **Phonebook/Down** to « **DELETE ALL EVENTS** » and press « **SELECT** ».
4. Press « **YES** » to confirm or « **NO** » to cancel.
5. Press « **BACK** » to return to the previous menu level.

IX. Calls lists

IMPORTANT

To use Caller Display you must first subscribe to the service from your network provider. A quarterly fee may be payable.

To ensure the caller's name is displayed, make sure you have stored the full telephone number, including the dialling code in the phonebook.

If the caller's number is stored in the phonebook, the name assigned to it is displayed.

*If the number is unavailable, « **UNAVAILABLE** » will be displayed.*

*If the call is from an international number, « **INTERNATIONAL** » will be displayed.*

*If the call is from the operator, « **OPERATOR** » will be displayed.*

*If the call is from a payphone, « **PAYPHONE** » will be displayed.*

*If the call is from a ringback request, « **RINGBACK** » will be displayed.*

1. Caller Display

If you have subscribed to a Caller Display Service, you will be able to see your caller's number on your handset display (provided it is not withheld) prior to answering the call.

If your caller's name and number are stored in the phonebook and a name/number match is found, you will see the caller's name on the display instead.


2. Calls lists

Each handset can hold details of up to 30 answered or unanswered calls and 20 dialled calls.

The caller's details are stored in a Calls list whether you answered the call or not. When the list is full, and a new call is received, the oldest entry will be deleted automatically.

AEG

3. New calls alert

When you have missed calls, the display shows « **YOU HAVE X NEW MISSED CALLS** ». If you press « **BACK** », the screen returns to standby and the  icon is displayed.

4. View new missed calls

1. When you see the new calls alert, press « **VIEW** ». You can now scroll **Redial/Up** or **Phonebook/Down** through the « **MISSED CALLS** » list.
2. Press « **OPTIONS** ». « **SHOW DETAILS** » is highlighted. Press « **SELECT** » to see the details.
3. Press « **BACK** » to return to the previous menu level.

*Note: Use the **Redial/Up** and **Phonebook/Down** buttons to toggle between showing the number or the number plus the time and date.*

5. View and dial from a Calls list

1. Press « **MENU** », scroll **Phonebook/Down** to « **CALLS LISTS** » and press « **SELECT** ». « **MISSED CALLS** » is highlighted. Scroll **Redial/Up** or **Phonebook/Down** to choose « **MISSED CALLS** », « **RECEIVED CALLS** » or « **DIALLED CALLS** ».
2. Press « **SELECT** ». You can now scroll **Redial/Up** or **Phonebook/Down** through the list.
3. Press « **OPTIONS** ». « **SHOW DETAILS** » is highlighted.
4. Press « **SELECT** » to see the caller's details.
5. Press « **DIAL** » to call the number.
6. Press « **BACK** » to return to the previous menu level.

*Note: Use the **Redial/Up** and **Phonebook/Down** buttons to toggle between showing the number or the number plus the time and date.*

6. Copy a Calls list number to the phonebook

1. Press « **MENU** », scroll **Phonebook/Down** to « **CALLS LISTS** » then press « **SELECT** ». « **MISSED CALLS** » is highlighted.
If required, scroll **Redial/Up** or **Phonebook/Down** to « **RECEIVED CALLS** » or « **DIALLED CALLS** » then press « **SELECT** ».
2. Scroll **Redial/Up** or **Phonebook/Down** to the entry you want and press « **OPTIONS** ».

AEG

3. Scroll **Phonebook/Down** to « **SAVE NUMBER** ». Press « **SELECT** ».
4. Enter a name then press « **OK** ». The number is displayed, press « **SAVE** ».
5. Scroll **Redial/Up** or **Phonebook/Down** to the ringtone you want and press « **SELECT** ».
6. Press « **BACK** » to return to the previous menu level.

Notes: See 'Entering names' and 'Writing tips' on page 21.

*If you need to edit the number, use « **CLEAR** » to delete any unwanted digits, then enter new ones using the keypad.*

7. Send a text message to a Calls list number

1. Press « **MENU** », scroll **Phonebook/Down** to « **CALLS LISTS** » then press « **SELECT** ». « **MISSED CALLS** » is highlighted. If required, scroll **Redial/Up** or **Phonebook/Down** to « **RECEIVED CALLS** » or « **DIALLED CALLS** » then press « **SELECT** ».
2. Scroll **Redial/Up** or **Phonebook/Down** to the entry you want and press « **OPTIONS** ».
3. Scroll **Phonebook/Down** to « **SEND MESSAGE** ». Press « **SELECT** ».
4. Write the message then press « **OPTIONS** ».
5. « **SEND** » is highlighted. Then press « **SELECT** ». (You can save, insert a symbol, emoticon or template).
6. The number is pre-entered on the Send to screen, press « **SEND** » to send the message.
7. Press « **BACK** » to return to the previous menu level.

Notes: See page 49 for more information on text messaging.

8. Delete an entry

1. Press « **MENU** », scroll **Phonebook/Down** to « **CALLS LISTS** » then press « **SELECT** ». « **MISSED CALLS** » is highlighted. If required, scroll **Redial/Up** or **Phonebook/Down** to « **RECEIVED CALLS** » or « **DIALLED CALLS** » then press « **SELECT** ».
2. Scroll **Redial/Up** or **Phonebook/Down** to the entry you want and press « **OPTIONS** ».
3. Scroll **Redial/Up** to « **DELETE CALL** ». Press « **SELECT** ».
4. Press « **BACK** » to return to the previous menu level.

AEG

9. Delete all entries

You can delete all entries in an individual Calls list or all entries from all Calls lists.

1. Press « **MENU** », scroll **Phonebook/Down** to « **CALLS LISTS** » then press « **SELECT** ». « **MISSED CALLS** » is highlighted. If required, scroll **Redial/Up** or **Phonebook/Down** to « **DELETE CALLS** » then press « **SELECT** ».
2. Scroll **Redial/Up** or **Phonebook/Down** to highlight « **MISSED CALLS** », « **RECEIVED CALLS** », « **DIALLED CALLS** » or « **ALL CALLS** ». Press « **SELECT** ».
3. Press « **YES** » to confirm or « **NO** » to cancel.
4. Press « **BACK** » to return to the previous menu level.

X. Call Waiting

You must subscribe to your network's Caller Display service for Call Waiting to work. A quarterly fee may be payable.

See page 40 for instructions on how to switch your Call Waiting service on or off.

1. During a call, you hear a soft beep in the earpiece and the display shows the number of the caller or the name if it matches an entry in your phonebook. If these are not available, the display shows « **CALL WAITING** ».
2. Press **R** to put your current caller on hold and speak to the new caller.
3. Press **R** again to switch between both callers.
4. Press **End/On/Off** to finish the current call.

XI. Network Services

1. Call Divert on/off/check

If you use this feature you will pay for the cost of the diverted call.

Call Divert will divert all incoming calls to another number of your choice.

1. Press « **MENU** » then scroll **Phonebook/Down** to « **NETWORK SERVICES** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **DIVERT ON** », « **DIVERT OFF** » or « **DIVERT CHECK** ». Press « **OPTIONS** ».
3. « **SHOW DETAILS** » is highlighted. Press « **SELECT** ».
4. Press « **DIAL** » to call. Follow the spoken instruction, or listen for confirmation/ status of your instructions.

AEG

2. Call Waiting on/off/check

Call Waiting lets you know if another person is trying to contact you while you are on a call. If a second caller rings you will hear a beep in the handset. Providing you have also subscribed to Caller Display, the screen will show the caller's details.

See page 39 for instructions on how to use Call Waiting.

1. Press « **MENU** » then scroll **Phonebook/Down** to « **NETWORK SERVICES** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **C WAIT ON** », « **C WAIT OFF** » or « **C WAIT CHECK** ». Press « **OPTIONS** ».
3. « **SHOW DETAILS** » is highlighted. Press « **SELECT** ».
4. Press « **DIAL** » to call. Listen for confirmation of your instruction or hear the status of your « **CALL WAITING** ».

3. Add or edit an entry

You can edit existing entries or use an 'empty' slot to enter your own preferred number in the Useful Numbers directory.

Names can be up to 12 characters and number up to 24 digits long.

1. Press « **MENU** » then scroll **Phonebook/Down** to « **NETWORK SERVICES** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to the entry you want. Press « **OPTIONS** ».
3. Scroll **Phonebook/Down** to « **EDIT ENTRY** ». Press « **SELECT** ».
4. Enter the name you want and press « **SAVE** ».
5. Enter the number you want and press « **SAVE** ».
6. Press « **BACK** » to return to the previous menu level.

4. Dial a stored entry

1. Press « **MENU** » then scroll **Phonebook/Down** to « **NETWORK SERVICES** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to the entry you want and press « **OPTIONS** ».
3. « **SHOW DETAILS** » is highlighted. Press « **SELECT** ».
4. Press « **DIAL** » to dial the number.
5. Press « **BACK** » to return to the previous menu level.

AEG

5. Delete an entry

1. Press « **MENU** » then scroll **Phonebook/Down** to « **NETWORK SERVICES** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to the entry you want and press « **OPTIONS** ».
3. Scroll **Phonebook/Down** to « **DELETE ENTRY** » and press « **SELECT** ».
4. Press « **YES** » to confirm or « **NO** » to cancel.
5. Press « **BACK** » to return to the previous menu level.

6. Delete all entries

1. Press « **MENU** » then scroll **Phonebook/Down** to « **NETWORK SERVICES** » and press « **SELECT** ».
2. Press « **OPTIONS** ».
3. Scroll **Phonebook/Down** to « **DELETE ALL** » and press « **SELECT** ».
4. Press « **YES** » to confirm or « **NO** » to cancel.
5. Press « **BACK** » to return to the previous menu level.

XII. Answering machine

Your Elegant can digitally record up to 13 minutes of messages or up to 59 messages. Each message can last up to a maximum of 3 minutes. As well as recording incoming messages, you can record memos for other users.


You can operate your answering machine from:

- . the handset or the base.
- . remotely, from any other Touchtone™ telephone, see page 47.

Your Elegant comes with two pre-recorded outgoing messages, Answer and Record or Answer Only, but if you wish you can record your own.

You will need to set the date and time (if you have not already done so) so that you will know when each message was received, see page 32. (The default day and time setting is 01/01/08 12:00PM.)

1. Switch the answering machine on / off via the handset

1. Press « **MENU** », scroll **Phonebook/Down** to « **ANSWER MACHINE** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **ANSWER ON/OFF** » and press « **SELECT** ».
3. Scroll **Redial/Up** or **Phonebook/Down** to highlight « **ON** » or « **OFF** » and press « **SELECT** ». When switched on the handset display shows  in idle.

AEG

2. Switch the answering machine on/off via the base

1. Press **Ans. On/Off**. The new setting is announced.

3. Answer delay

Answer delay sets the number of times your Elegant will ring before the answer machine picks up your call and starts playing the outgoing message. You can change this setting to between 2–9 rings or Time Saver.

The default setting is 6 rings.

For information on Time Saver, see “Switch your answering machine on remotely”, page 48.

1. Press « **MENU** », scroll **Phonebook/Down** to « **ANSWER MACHINE** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **ANSWER SETTINGS** » and press « **SELECT** ».
3. Scroll **Redial/Up** or **Phonebook/Down** to « **ANSWER DELAY** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to the setting you want and press « **SELECT** ».
5. Press « **BACK** » to return to the previous menu level.

4. Switch message alert tone on / off

When you have new messages, with the audible message alert switched on, you will hear an audible alert once at the handset. The default setting is Off.

1. Press « **MENU** », scroll **Phonebook/Down** to « **ANSWER MACHINE** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **ANSWER SETTINGS** » and press « **SELECT** ».
3. Scroll **Redial/Up** or **Phonebook/Down** to « **MESSAGE ALERT** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to highlight « **ON** » or « **OFF** » and press « **SELECT** ».
5. Press « **BACK** » to return to standby.

5. On-screen alert

When you have new answering machine messages, the screen shows « **YOU HAVE X NEW MESSAGES** ». All new messages are indicated by a dot.

1. Press « **PLAY** ». Or, scroll **Redial/Up** or **Phonebook/Down** the list of messages. Press « **PLAY** » to hear the highlighted message.

AEG

6. Outgoing messages

The outgoing message is the message a caller first hears when the answering machine picks up their call. There are 2 pre-recorded outgoing messages to choose from (see note right) or you can record your own. You can only record your outgoing message using the handset.

- Answer and Record

The pre-set Answer and Record outgoing message, that allows your caller to leave a message, is "Hello, your call cannot be taken at the moment, so please leave your message after the tone".

Your Answer and Record outgoing message can be up to 3 minutes long and will replace the prerecorded message.

- Answer Only

The pre-set Answer Only outgoing message, where callers hear an announcement but cannot leave a message, is "Hello, your call cannot be taken at the moment and you cannot leave a message, so please call later".

When recording your Answer Only message, remember to advise your caller that they will not be able to leave a message.

Your Answer Only message can be up to 3 minutes long (maximum recording length) and will replace the pre-recorded message.

However, you should try to keep your message short to allow time for recording memos, or incoming messages when using Answer and Record mode.

7. Record your own outgoing message via the handset

1. Press « **MENU** », scroll **Phonebook/Down** to « **ANSWER MACHINE** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **OUTGOING MESSAGE** » and press « **SELECT** ».
3. « **RECORD** » is highlighted, press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to « **ANSWER & RECORD** » or « **ANSWER ONLY** » and press « **SELECT** ».
5. The display shows « **PLEASE SPEAK AFTER THE TONE** ».
6. After the tone, speak your message clearly into the handset then press « **SAVE** » to end recording.
7. Your outgoing message is played back. If you want to delete it, press « **DELETE** » during playback. If you press « **SAVE** » or wait for the message to play back, it will be saved.

AEG

8. Check or delete your outgoing message

Deleting a personal outgoing message automatically reinstates the pre-recorded outgoing message.

You cannot delete a pre-recorded message.

1. Press « **MENU** », scroll **Phonebook/Down** to « **ANSWER MACHINE** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **OUTGOING MESSAGE** » and press « **SELECT** ».
3. Scroll **Phonebook/Down** to « **PLAY** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to « **ANSWER & RECORD** » or « **ANSWER ONLY** » and press « **SELECT** ».
5. Press **Phonebook/Down** to « **PERSONAL OGM** » and press « **SELECT** ».
6. The message is played. Press « **OK** » to stop playback or press « **DELETE** » to delete a personal OGM.
7. Press « **BACK** » to return to the previous menu level.

9. Select outgoing message mode via the handset

Choose which outgoing message you want played to callers.

1. Press « **MENU** », scroll **Phonebook/Down** to « **ANSWER MACHINE** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **ANSWER SETTINGS** » and press « **SELECT** ».
3. « **ANSWER MODE** » is highlighted, press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to « **ANSWER & RECORD** » or « **ANSWER ONLY** » and press **SELECT**.
5. If there is a personal OGM saved, press **Redial/Up** or **Phonebook/Down** to « **DEFAULT OGM** » or « **PERSONAL OGM** » and press « **SELECT** ». Your selection is confirmed. If there is no personal OGM saved the default OGM will be selected.
6. Press « **BACK** » to return to the previous menu level.

10. Select outgoing message mode via the base

1. Press and hold **Ans. On/Off**. You hear "Please select outgoing message".
2. Press << **Skip** to hear "Answer and Record" or **Skip** >> to hear "Answer Only".

AEG

11. Record a memo

Memos can only be recorded via the handset.

1. Press « **MENU** », scroll **Phonebook/Down** to « **ANSWER MACHINE** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **RECORD MEMO** » and press « **SELECT** ».
3. The display shows « **PLEASE SPEAK AFTER THE TONE** ».
4. After you hear the tone, speak your memo then press « **SAVE** » to end recording.
5. Your memo is played back. If you want to delete it, press « **DELETE** » during playback. If you press « **SAVE** » or wait for the message to play back, it will be saved.
6. Press « **BACK** » to return to the previous menu level.

12. Call screening

When the answering machine is on and takes a call, you can use the loudspeaker to listen to the caller leaving a message. You can then identify the caller and decide whether to take the call in person.

While screening, you can adjust the volume by pressing **Redial/Up** or **Phonebook/Down**.

1. When your Elegant rings, wait for the answering machine to take the call. When the caller begins leaving a message, the display shows « **RECORDING** ». Press « **SCREEN** » to hear the caller.
2. To interrupt and speak to the caller directly, press « **TALK** ». Or, after the caller has hung up, and the display shows « **YOU HAVE A NEW MESSAGE** », press « **PLAY** » to play new messages.
3. Press « **BACK** » to return to the previous menu level.

AEG

13. Message playback via the base

1. Press **Play/Pause**. New messages are played first.

During playback:

Delete	to delete the current message.
<< Skip	once to repeat the message.
<< Skip	twice to play the previous message.
Skip >>	to play the next message.
Play/Pause	to pause and resume playback.
Stop	to stop playback
Vol +/Vol -	adjust the speaker volume Vol + or Vol - during playback

At the end of playback press and hold **Delete** to delete all old messages.

14. Message playback via the handset

Each message is played back with day and time of the call announced as well as the caller's number (if available) and name if stored in the phonebook.

When a memo is played back, the caller's name and number is displayed if available.

1. Press **« MENU »** and scroll **Phonebook/Down** to **« ANSWER MACHINE »**. Press **« SELECT »**.
2. **« PLAY »** is highlighted. Press **« SELECT »** to choose which messages you want to play or scroll **Phonebook/Down** to **« PLAY ALL »** and press **« SELECT »** to play all messages.
3. Press **« TALK »** to switch between the earpiece and handset loudspeaker. During playback press **« OPTIONS »** then scroll **Redial/Up** or **Phonebook/Down** to: **« PAUSE »**, **« REPEAT MESSAGE »**, **« SKIP FORWARD »**, **« SKIP BACKWARD »**, **« DELETE »**.
4. Press **« SELECT »** to choose the highlighted option. At the end of playback, press **« BACK »** to return to the previous menu level.

AEG

Handset button shortcuts

During playback:

- 1 To pause
- 2 To resume
- 3 To repeat message
- 4 To play previous message
- 5 To delete current message
- 6 To play next message

Answering Machine messages that are not deleted are automatically saved.

New / unplayed messages cannot be deleted.

15. Delete all old messages

- 1. Press « **MENU** », scroll **Phonebook/Down** to « **ANSWER MACHINE** » and press « **SELECT** ».
- 2. Scroll **Phonebook/Down** to « **DELETE MESSAGES** » and press « **SELECT** ».
- 3. Display shows « **DELETE ALL OLD MESSAGES?** ». Press « **YES** » to confirm or « **NO** » to cancel.
- 4. Press « **BACK** » to return to the previous menu level.

16. Remote access

You can operate your answering machine from any Touchtone™ phone by calling your Elegant and entering a 4 digit security code.

- Switch remote access On or Off

- 1. Press « **MENU** », scroll **Phonebook/Down** to « **ANSWER MACHINE** » and press « **SELECT** ».
- 2. Scroll **Phonebook/Down** to « **ANSWER SETTINGS** » and press « **SELECT** ».
- 3. Scroll **Redial/Up** or **Phonebook/Down** to « **REMOTE ACCESS** » and press « **SELECT** ».
- 4. Scroll **Redial/Up** or **Phonebook/Down** to highlight « **ON** » or « **OFF** » and press « **SELECT** ».
- 5. Press « **BACK** » to return to standby.

AEG

Memory full

If the memory is within 10 seconds of becoming full while a caller is leaving a message, they will hear, " Please complete your message within 10 seconds". If they are still talking when the memory becomes full the caller hears, "Thank you for calling", and the machine will hang up.

The OGM will set to Answer Only. You must delete messages before your Elegant can record new messages.

- Change the remote access PIN

You should change the security PIN from the original setting of 0000.

It is advisable to make a note of your new PIN code and keep it somewhere safe.

1. Press « **MENU** », scroll **Phonebook/Down** to « **ANSWER MACHINE** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **ANSWER SETTINGS** » and press « **SELECT** ».
3. Scroll **Redial/Up** or **Phonebook/Down** to « **REMOTE ACCESS** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to highlight « **SET REMOTE PIN** » and press « **SELECT** ».
5. Enter the Old 4-digit PIN and press « **SAVE** ». (Default setting = 0000)
6. Enter the new 4-digit Pin and press « **SAVE** ».
7. Enter the new PIN again and press « **SAVE** ».
8. Press « **BACK** » to return to standby.

- Switch your answering machine on remotely

If you forget to switch your answering machine on, you can do it remotely from another phone.

1. Dial your telephone number and let it ring. After 20 rings you will hear your outgoing message.
2. Press *, then enter your security code. (Default setting = 0000)
3. Press **0** and your answering machine will switch on ready to answer incoming calls.

Time saver

When you ring in to access your messages remotely, if your answering machine is set to time saver and you have new messages it will answer after 2 rings, if you do not have any new messages, it will answer after 6 rings. This means you can hang up after 3 rings knowing you have no new messages, saving you time and the cost of the call.

AEG

Your handset will automatically return to standby if no button is pressed for 8 seconds or more.

If you have any new messages they will be played after you have entered your security PIN code.

If you enter an incorrect PIN code you will hear "Incorrect security code. Please enter your security code". You can try entering the code again. If it is still incorrect you will hear the voice prompt and your Elegant will hang up.

If no button is pressed for 8 seconds or more your Elegant will hang up.

17. Play messages

1. Dial your phone number. When you hear your outgoing message, press *.
2. Enter your 4 digit PIN.
3. Use the keypad to operate your answering machine:
 - 1 To hear main menu
 - 2 To play messages
 - 3 To play new messages
 - 4 To skip back during messages
 - 5 To delete during messages
 - 6 To skip forward during messages
 - 7 To set to answer only (or answer and record) depending upon the Answer Mode status of the product at that time.
 - 8 To record a new outgoing message
 - 9 To set answer off
 - 0 To set answer on

XIII. Text messaging

Your Elegant can send and receive text messages from participating mobile networks and compatible landline telephones in Syria, Jordan and Lebanon.

Your Elegant can store up to a total of 50 short messages across all handset Outboxes, Drafts boxes and Inboxes.

AEG

IMPORTANT

You must subscribe to your Network Provider's Caller Display service so that you can use text messaging and you must not withhold your telephone number.

A quarterly fee may be payable, please contact your network provider for more details.

You may also send messages to landline phones that are NOT text compatible. Messages to non-compatible lines will be connected to voice text and delivered in spoken words to the telephone as a call. Please note that the conversion can translate common abbreviations and smileys etc, but to ensure maximum clarity of message delivery, abbreviations etc should be used sparingly.

1. Cost of the fixed line service








































There is no subscription charge (other than the subscription to Caller Display).

2. Send a text message

1. Press « **MENU** », « **TEXT MESSAGING** » is displayed, press « **SELECT** ».
2. « **WRITE MESSAGE** » is highlighted. Press « **SELECT** ».
3. Use the keypad to enter your message.
4. Press « **OPTIONS** ».

« SEND » is highlighted	Press « SELECT » to send the message. Enter the phone number or press « SEARCH » to open the phonebook then scroll to the number you want and press « SELECT ». Now press « SEND ».																																												
Or scroll Redial/Up or Phonebook/Down to:																																													
« SAVE »	Press « SELECT » to save the message in the Drafts folder.																																												
« INSERT SYMBOL »	<p>Press « SELECT ». The symbol table is displayed.</p> <table><tr><td>.</td><td>,</td><td>-</td><td>?</td><td>!</td><td>ı</td><td>¿</td><td>'</td><td>@</td><td>:</td><td>;</td></tr><tr><td>/</td><td>"</td><td>(</td><td>)</td><td>_</td><td>+</td><td>&</td><td>%</td><td>*</td><td>=</td><td><</td></tr><tr><td>></td><td>£</td><td>€</td><td>\$</td><td>¥</td><td>¤</td><td>\</td><td>~</td><td>#</td><td>\$</td><td>Δ</td></tr><tr><td>Φ</td><td>Γ</td><td>Λ</td><td>Ω</td><td>Π</td><td>Ψ</td><td>Σ</td><td>θ</td><td>Ξ</td><td></td><td></td></tr></table> <p>Press Redial/Up or Phonebook/Down to highlight the symbol you want then press « INSERT ».</p>	.	,	-	?	!	ı	¿	'	@	:	;	/	"	()	_	+	&	%	*	=	<	>	£	€	\$	¥	¤	\	~	#	\$	Δ	Φ	Γ	Λ	Ω	Π	Ψ	Σ	θ	Ξ		
.	,	-	?	!	ı	¿	'	@	:	;																																			
/	"	()	_	+	&	%	*	=	<																																			
>	£	€	\$	¥	¤	\	~	#	\$	Δ																																			
Φ	Γ	Λ	Ω	Π	Ψ	Σ	θ	Ξ																																					

AEG

« INSERT EMOTICON »	<p>Press « SELECT ». The Emoticon table is displayed.</p> <table border="1"><thead><tr><th colspan="6">Insert Emoticon</th></tr></thead><tbody><tr><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td colspan="6"><div>Select  Back</div></td></tr></tbody></table> <p>Press Redial/Up or Phonebook/Down to highlight the Emoticon you want then press « INSERT ».</p>	Insert Emoticon																		<div>Select  Back</div>					
Insert Emoticon																									
																									
																									
<div>Select  Back</div>																									
« INSERT TEMPLATE »	<p>Press « SELECT ». The list of templates is displayed.</p> <p>Press Redial/Up or Phonebook/Down to highlight the Template you want then press « INSERT ».</p>																								

5. When sending a message, the display shows « **SENDING MESSAGE** » then « **MESSAGE SENT** ».

- Writing tips

Press « **CLEAR** » to delete incorrect characters. Use **Redial/Up** or **Phonebook/Down** to move the cursor through the text, if you want to insert/delete text.

- Upper & lower case

Press **#/Lock** to switch between upper case ABC, lower case abc letters and numbers.

Maximum number of characters in a text message is 160. The display shows a character countdown from 160 down to 0 (Unless message size is set to 612 characters).

If the text is unsuccessful, the message « **UNABLE TO SEND** » will be displayed.

In order to send and receive text messages you must not withhold your number. On most networks if you normally withhold your number the 1470 prefix presents your number for you.

*Notes: If the text mailboxes are full when you attempt to write a new message the display shows « **MEMORY FULL DELETE MESSAGES** » for 2 seconds. You must delete messages before you can write and send a new one.*

If you are writing a text and you receive a call the text will be lost.

AEG

3. Standard text entry

With standard text entry you can enter a word by pressing each letter button a number of times to display the character you want on the screen. For example, to write the word "Hello", press **4** twice, **3** twice, **5** three times, **5** three times and **6** three times.

4. Receiving and reading text messages

When you receive a new text message, the icon is displayed along with « **YOU HAVE X NEW MESSAGES** ».

- **Do you have two text phone bases connected to the same phone line?**

If you have two text phone base stations plugged into one line, you are likely to experience problems receiving text messages. Normally, only one SMS enabled base unit (DECT or cordless) can be plugged into any line.

If you do want to use two base units and still receive written text you must delete receive service centre number from one of the base stations. To do this on your Elegant, see page 56. This will allow you to send text via either base station but texts will only be received on the product with the active receive centre number.

If the base unit with the active receive centre number is a DECT product then all handsets registered to it will be able to receive text messages.

5. Read a new message

Received messages are stored in the Inbox.

1. The Inbox is opened and the list of messages displayed. If you press « **BACK** » the message is stored in the Inbox for reading later.
2. In the Inbox scroll **Redial/Up** (to more recent messages) or **Phonebook/Down** (to earlier list of messages) through the list of messages.
3. Highlight the message you want to read and press « **READ** » or press « **BACK** » to return to Text messaging menu.
4. Press **End/On/Off** to return to standby.

AEG

6. Read, forward, delete, view and save numbers of texts in the Inbox

When you see the new message alert, if you press « **BACK** » the message is stored in your Inbox so you can read it later.

1. Press « **MENU** », « **TEXT MESSAGING** » is displayed. If you have new messages you will go straight to the Inbox, if not scroll **Phonebook/Down** to Inbox and press « **SELECT** ».
2. Scroll **Redial/Up** or **Phonebook/Down** to the message you want and press « **READ** ». Scroll **Redial/Up** or **Phonebook/Down** through the message.
3. Press « **OPTIONS** » and scroll **Redial/Up** or **Phonebook/Down** to:

« REPLY »	Press « SELECT ». Write your reply then press « OPTIONS » and select « SEND ».
« FORWARD »	Press « SELECT ». The message is displayed. Press « OPTIONS ». Display highlights « SEND ». Press « SELECT » and enter a number or search for the number then press « SEND ».
« MESSAGE DETAILS »	You can see who sent the message and then call them. Press « SELECT » the sender's number is displayed. Press « DIAL » if you want to call the number.
« USE NUMBER »	To call the sender, press « SELECT ». The display shows « CALL ». Press « SELECT » to call the sender « OR » to save the number, scroll Phonebook/Down to « SAVE » and press « SELECT ». Enter a name and press « OK », edit the number if required then press « SAVE ». Scroll Redial/Up or Phonebook/Down to the ringtone and press « SELECT ». The number is saved in the phonebook.
« DELETE »	Press « SELECT ». Press « YES » to confirm or « NO » to cancel.

AEG

7. Edit or send texts in the Drafts box

If you save a message to complete or send later it will be stored in the Drafts box. Only one message can be saved in each user's Drafts box.

1. To open the Drafts box, Press « **MENU** », « **TEXT MESSAGING** » is displayed. Press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **DRAFTS** » and press « **SELECT** ».
3. Press « **EDIT** » to edit your message content.
4. Press « **OPTIONS** » and scroll **Redial/Up** or **Phonebook/Down** to:

« SEND »	Press « SELECT » to send the message. Enter the phone number or press « SEARCH » to open the phonebook then scroll Phonebook/Down to the number you want and press « SELECT ». Press « SEND ».																																												
« SAVE »	Press « SELECT » to save the message in the Drafts folder.																																												
« INSERT SYMBOL »	<p>Press « SELECT ». The symbol table is displayed.</p> <table border="1" data-bbox="413 671 868 818"> <tr> <td>.</td><td>,</td><td>-</td><td>?</td><td>!</td><td>i</td><td>¿</td><td>'</td><td>@</td><td>:</td><td>;</td></tr> <tr> <td>/</td><td>"</td><td>(</td><td>)</td><td>_</td><td>+</td><td>&</td><td>%</td><td>*</td><td>=</td><td><</td></tr> <tr> <td>></td><td>£</td><td>€</td><td>\$</td><td>¥</td><td>¤</td><td>\</td><td>~</td><td>#</td><td>§</td><td>Δ</td></tr> <tr> <td>Φ</td><td>Γ</td><td>Λ</td><td>Ω</td><td>Π</td><td>Ψ</td><td>Σ</td><td>θ</td><td>≡</td><td></td><td></td></tr> </table> <p>Press Redial/Up or Phonebook/Down to highlight the symbol you want then press « INSERT ».</p>	.	,	-	?	!	i	¿	'	@	:	;	/	"	()	_	+	&	%	*	=	<	>	£	€	\$	¥	¤	\	~	#	§	Δ	Φ	Γ	Λ	Ω	Π	Ψ	Σ	θ	≡		
.	,	-	?	!	i	¿	'	@	:	;																																			
/	"	()	_	+	&	%	*	=	<																																			
>	£	€	\$	¥	¤	\	~	#	§	Δ																																			
Φ	Γ	Λ	Ω	Π	Ψ	Σ	θ	≡																																					
« INSERT EMOTICON »	<p>Press « SELECT ». The Emoticon table is displayed.</p> <table border="1" data-bbox="522 926 766 1084"> <tr> <th colspan="6">Insert Emoticon</th> </tr> <tr> <td>😊</td><td>😄</td><td>😁</td><td>😂</td><td>😃</td><td>😅</td> </tr> <tr> <td>😆</td><td>😇</td><td>😈</td><td>😉</td><td>😊</td><td>😋</td> </tr> <tr> <td colspan="6"> <div> <div>Select</div> <div>⬆</div> <div>Back</div> </div> </td> </tr> </table> <p>Press Redial/Up or Phonebook/Down to highlight the Emoticon you want then press « INSERT ».</p>	Insert Emoticon						😊	😄	😁	😂	😃	😅	😆	😇	😈	😉	😊	😋	<div> <div>Select</div> <div>⬆</div> <div>Back</div> </div>																									
Insert Emoticon																																													
😊	😄	😁	😂	😃	😅																																								
😆	😇	😈	😉	😊	😋																																								
<div> <div>Select</div> <div>⬆</div> <div>Back</div> </div>																																													
« INSERT TEMPLATE »	<p>Press « SELECT ». The list of templates is displayed.</p> <p>Press Redial/Up or Phonebook/Down to highlight the Template you want then press « INSERT ».</p>																																												

5. When sending a message, the display shows « **SENDING MESSAGE** » then « **MESSAGE SENT** ».

AEG

8. Forward or delete texts in the Outbox

Your Elegant's outbox is like a redial list. It holds a copies of up to 5 sent messages. When the Outbox is full, a new message replace the oldest.

1. To open the Outbox box, Press « **MENU** », « **TEXT MESSAGING** » is displayed. Press « **SELECT** ». Scroll **Phonebook/Down** to « **OUTBOX** » and press « **SELECT** ».
2. Scroll **Redial/Up** or **Phonebook/Down** to the message you want and press « **READ** ». Scroll **Redial/Up** or **Phonebook/Down** through the message.
3. Press « **OPTIONS** » and scroll **Redial/Up** or **Phonebook/Down** to:

« FORWARD »	Press « SELECT ». The message is displayed. Press « OPTIONS ». Display highlights « SEND ». Press « SELECT » and enter the number or press « SEARCH » to search the phonebook. When the number is entered, press « SEND ».
« DELETE »	Press « SELECT » then press « YES » to confirm or « NO » to cancel.

4. Press **End/On/Off** to return to standby.

9. Edit templates

There are three pre-set templates:

Please call

I'll be there at

What time will you be home?

You can change the templates to your preferred message, up to a maximum of 32 characters. If you delete a template without replacing the text it is marked as Empty.

All templates are restored if you reset your Elegant to its default settings, see page 31.

1. Press « **MENU** », « **TEXT MESSAGING** » is displayed. Press « **SELECT** » scroll **Phonebook/Down** to « **TEMPLATES** » and press « **SELECT** ».
2. Scroll **Redial/Up** or **Phonebook/Down** to the template you want and press « **OPTIONS** ».

AEG

« EDIT »	Press « SELECT ». Press « CLEAR » to delete characters. Enter your template text and press « SAVE ».
« DELETE »	Press « SELECT ». Press « YES » to confirm or « NO » to cancel.

3. Press **End/On/Off** to return to standby.

10. Deleting texts

Selecting « **ALL MESSAGES** » will delete all messages stored in your Inbox, Outbox and Drafts box.

1. Press « **MENU** », « **TEXT MESSAGING** » is displayed. Press « **SELECT** » scroll **Phonebook/Down** to « **DELETE MESSAGES** » and press « **SELECT** ».
2. Scroll **Redial/Up** or **Phonebook/Down** to « **INBOX** », « **DRAFTS** », « **OUTBOX** » or « **ALL MESSAGES** » and press « **SELECT** ».
3. Press « **YES** » to confirm or « **NO** » to cancel.
4. Press « **BACK** » to return to standby.

11. Service Centre numbers

To send and receive text messages you need the telephone number of your Network's text Centre. If you accidentally delete the Outgoing or Incoming Service Centre numbers you will need to re-enter them in order for your text Service to work. You can enter up to 4 Service Centre numbers – two incoming and two outgoing.

- Add or change Service Centre numbers

If you have more than one 'Server Centre' stored on your Elegant you will need to select which one you want to use for sending (see next section).

1. Press « **MENU** », « **TEXT MESSAGING** » is displayed. Press « **SELECT** », scroll **Redial/Up** or **Phonebook/Down** to « **TEXT SETTINGS** » and press « **SELECT** ».
2. « **SERVICE CENTRES** » is highlighted, press « **SELECT** ».
3. Scroll **Redial/Up** or **Phonebook/Down** to « **RECEIVE CENTRES** » or « **SEND CENTRE** » and press « **SELECT** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to « **CENTRE 1** » or « **CENTRE 2** » and press « **SELECT** ».
5. Enter the number for the centre and press « **SAVE** ».
6. Press « **BACK** » to return to the previous menu level.

- Set send centre

1. Press « **MENU** », « **TEXT MESSAGING** » is displayed. Press « **SELECT** ». Scroll **Redial/Up** or **Phonebook/Down** to « **TEXT SETTINGS** » and press « **SELECT** ».
2. « **SERVICE CENTRES** » is highlighted, press « **SELECT** ».
3. Press « **SELECT** » again to choose « **SET SEND CENTRE** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to « **RECEIVE CENTRE 1** » or « **RECEIVE CENTRE 2** » or « **SEND CENTRE 1** » or « **SEND CENTRE 2** » and press « **SELECT** ».
5. Press « **BACK** » to return to the previous menu level.

12. Message alert tone

When you receive a text message, the message alert tone will sound. These beeps can be switched on or off.

1. Press « **MENU** », « **TEXT MESSAGING** » is displayed. Press « **SELECT** ». Scroll **Phonebook/Down** to « **TEXT SETTINGS** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **MESSAGE ALERT** » and press « **SELECT** ».
3. Scroll **Redial/Up** or **Phonebook/Down** to « **ON** » or « **OFF** » and press « **SELECT** ».
4. Press « **BACK** » to return to the previous menu level.

13. Set message size

A standard text message is 160 characters long. You can set a message to be up to 612 characters and the message will be sent as up to 4 linked messages each up to 160 characters long

1. Press « **MENU** », « **TEXT MESSAGING** » is displayed. Press « **SELECT** ». Scroll **Phonebook/Down** to « **TEXT SETTINGS** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **MESSAGE SIZE** » and press « **SELECT** ».
3. Scroll **Redial/Up** or **Phonebook/Down** to highlight « **160** » or « **612** » characters, then press « **SELECT** ».
4. Press « **BACK** » to return to the previous menu level.

XIV. Using additional handsets

You can use up to five Elegant additional handsets with your Elegant base to extend your phone system without needing to install extension sockets for each new phone.

Your Elegant handset can also be registered to up to 3 other bases. You can then select the base you would prefer to use.

If you have purchased a Elegant multiple pack any additional handsets come pre-registered to the base.

If you have purchased an additional handset separately you must register it to your Elegant base before it can be used.

1. Registering an additional handset

At the base:

1. Press and hold **Find** for 3 seconds until the base Power / In use starts flashing. You have up to 60 seconds to register the handset.

At the handset:

1. If the handset is new and the display shows « **PLEASE REGISTER** ». Press « **MENU** ». The display shows « **REGISTRATION** ». Press « **SELECT** ». Or
If the handset has already been registered to another base the standby display is shown. Press « **MENU** », scroll **Redial/Up** or **Phonebook/Down** to « **REGISTRATION** » and press « **SELECT** ».
2. « **REGISTER HANDSET** » is highlighted. Press « **SELECT** ».
3. Bases are displayed. If necessary, scroll **Redial/Up** or **Phonebook/Down** to a new base you wish to register your Elegant handset to and press « **SELECT** ».
4. Enter the system PIN (Default PIN code = 0000) and press « **OK** ».
5. The display shows « **SEARCHING BASE X** » (where X is the chosen base number) then « **HANDSET REGISTERED** ». The handset is automatically assigned the next available handset number.

Note: If registration is not successful first time, please repeat the process again in case the base registration period ran out of time. If there are already 5 handsets registered to the base, the registration will fail. You must deregister another handset before you can register the new one.

AEG

2. Select a base

If your Elegant handset is registered to more than one base, you can select which base to use.

1. Press « **MENU** », scroll **Redial/Up** or **Phonebook/Down** to « **REGISTRATION** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **SELECT BASE** » and press « **SELECT** ».
3. All base numbers are displayed. « **(IN USE)** » is added to bases where the handset was previously registered to. Scroll **Redial/Up** or **Phonebook/Down** to the base you want and press « **SELECT** ».
4. Display shows « **SEARCHING BASE...** » then the standby display for that base.

3. De-register a handset

Use one handset to de-register another. You cannot de-register the handset you are using.

1. Press « **MENU** », scroll **Redial/Up** or **Phonebook/Down** to « **REGISTRATION** » and press « **SELECT** ».
2. Scroll **Phonebook/Down** to « **DE-REGISTER** » and press « **SELECT** ».
3. Enter the system PIN (Default PIN code = 0000) and press « **OK** ».
4. Scroll **Redial/Up** or **Phonebook/Down** to the handset you want to de-register and press « **SELECT** ».
5. Press « **YES** » to confirm or « **NO** » to cancel. The display confirms de-registration.
6. Press « **BACK** » to return to the previous menu level or close the handset cover to return to standby.

4. Internal calls

When an internal call is received, the display shows « **INTERNAL CALL HANDSET X** » (where X is the calling handset) and the handset number.

- Call another handset

If you have more than one handset registered to the base, you can make internal calls between two handsets.

1. Press **Int** then the number (1-5) of the handset you want to call.
2. Press « **OK** » to dial.

AEG

- Transfer a call

You can transfer an external call to another handset registered to the base.

During your call:

1. Press **Int** then the handset number (1-5) you want.
2. Press « **OK** » to dial or press « **END** » to cancel the calls request and return to the caller.
3. When the other handset answers you can announce the caller.
4. Press **End/On/Off** to complete the transfer or **Int** to switch back and forth between both callers.

*Note: If the other handset does not answer, press « **END** » to return to your original caller.*

- 3-Way conference call

You can hold a 3-way conference call between 2 internal callers and 1 external caller.

During a call to an external caller:

1. Press **Int** then the handset number (1-5) you want.
2. Press « **OK** » to dial.
3. When the other handset answers you can announce the caller.
4. Press « **JOIN** » to begin the conference call. Display shows « **CONFERENCE CALL** ».
5. Press **End/On/Off** to hang up.

XV. Help

Phone does not work

- . Have you installed the batteries correctly?
- . Check that the mains power is correctly connected.

No dial tone

- . Is the telephone cord of the base plugged into the phone socket?
- . Check that the mains power is correctly connected to the base and to the handset charger(s).
- . Only use the telephone cord supplied with the phone.

AEG

Cannot dial out or receive calls

- Check that the mains power is correctly connected.
- The batteries may need recharging.
- Has there been a power cut? If so, place the handset back on the base for 10 seconds and try again. If it still does not work disconnect the batteries and mains power for 10 minutes, then reconnect and try again.

You have a dial tone, but the phone will not dial out

- You may need to change the dial mode from tone to pulse, see page 29.
- If you are connected to a switchboard, check whether you need to dial an access code.

Handset does not ring

- The ringer volume may be switched off, see page 26.
- Check that the mains power is correctly connected.
- Make sure the handset is registered to the base, see page 58.

No display

- The batteries may be flat, dead or incorrectly inserted. Recharge or replace the batteries.

icon flashes

- Is the handset registered correctly to the base, see page 58.
- Check that the mains power is correctly connected.
- Check that the handset is within range of the base.
- The batteries are low, place the handset on the base/charger to recharge.

icon not scrolling

- Try cleaning the charging contacts.
- Check that the mains power is correctly connected.

You hear the busy tone when you press Talk/Handsfree.

- Make sure the handset is in range of the base.
- Another handset registered to your Elegant base may be on the line.

AEG

Answering machine does not record any messages

- . The memory may be full. Play and delete old messages, see page 46.

Answering machine messages have the wrong date and time

- . Have you set the date and time? See page 32.

Cannot access your messages from another phone

- . Have you changed the remote access security PIN code? See page 48.
Always keep a note of the new PIN code in a safe place.

No Caller Display number/name displayed

- . Have you subscribed to a Caller Display service from your network provider, see page 36.
- . The caller may have withheld their number.
- . An exact name/number match was not found in your directory. Check that you have stored the full STD dialling code.

Cannot register a handset to a base

- . You can register a total of 5 handsets to your Elegant base and you can register your Elegant handset to up to 4 bases. Check that you have not exceeded the limits.
- . Check that you have entered the correct PIN number (default PIN 0000).
- . Check that you are at least one metre away from other electrical equipment to avoid interference when registering.

Base unit does not ring, but the lights are on

- . Have you connected the telephone line correctly?
- . Is the base ringer set to off?
- . You may have a faulty line or socket. Try using another socket or line.

Buzzing noise on my phone or on other electrical equipment nearby

- . Sometimes your Elegant can interfere with other electrical equipment if it is placed too close. It is recommended that you place your Elegant at least one metre away from electrical appliances or metal obstructions to avoid any risk of interference.

AEG

Possible problems with text messaging

- **Text messages cannot be sent and screen displays Message Sending Failed**

- . The base station power supply or telephone line cord might not be properly connected. Check that the base station power supply is plugged into the mains socket and switched on and that the telephone is plugged into the telephone wall socket.
- . There might be a fault on the line. Check your telephone line is working properly.
- . You might have deleted the server number in error. See page 56 for instructions on how to enter the number.

- **Cannot send text**

- . Check service centre number is correct. In order to send and receive text messages you must not withhold your number.

- **Cannot receive text**

- . More than one text messaging product is plugged into the line. Remove other products.
- . Check service centre number is correct.
- . Ensure you have subscribed to a Caller Display service and that it is active. You can check this by noting if your phone displays your caller's number when you receive an incoming call.
- . If you are using personal user areas please ensure you have given people your user area number and that they are entering it to the end of your telephone number when sending you a text message.

Billing enquiries

- . Refer to the telephone number shown on your telephone bill.

If you are sending a message from a fixed line phone to another fixed line phone

Forces a message you send to be delivered as a voice text even though the recipient may have a text enabled phone and usually receives written text. This command is inserted at the start of the message and applies only to that message, e.g. 'Hello I will be home late'.

You keep hearing an error beep

- . You have pressed the wrong button in a sequence. Check the prompts in the display or refer to instructions in this user guide.

XVI. General information

IMPORTANT

This equipment is not designed for making emergency telephone call when the power fails. Alternative arrangements should be made for access to emergency services.

This product is intended for connection to analogue public switched telephone networks and private switchboards in Syria, Jordan and Lebanon.

Safety information

- . Only use the power supply suitable for the Elegant range. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone.
- . Use only the approved rechargeable batteries supplied. There is a risk of explosion if the batteries are replaced by an incorrect type.
- . Do not open the handset (except to replace the handset batteries) or the base. This could expose you to high voltages or other risks.
- . Radio signal transmitted between the handset and base may cause interference to hearing aids.
- . It is recommended that advice from a qualified expert be sought before using this product in the vicinity of emergency/intensive care medical equipment.
- . It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.
- . Your product may interfere with other electrical equipment, e.g. TV and radio sets, clock/alarms and computers if placed too close. It is recommended that you place your product at least one metre away from such appliances to minimise any risk of interference.
- . Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals. Dispose of batteries according to the instructions.

Cleaning

- Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe.

Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

- Do not expose to direct sunlight.
- The handset may become warm when the batteries are being charged or during prolonged periods of use. This is normal. However, we recommend that to avoid damage you do not place the product on antique/veneered wood.
- Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosive or other hazardous conditions.
- There is a slight chance your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

Product disposal instructions



The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimize the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

- Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

AEG

- Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

Technical information

How many telephones can I have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your Elegant has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Any additional handsets and chargers that you register have a REN of 0.

R&TTE

This product is intended for use within Syria, Jordan and Lebanon. for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Declaration of Conformance

Hereby, AEG declares that this Elegant is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Connecting to a switchboard

This product is intended for use within Syria, Jordan and Lebanon. for connection to the public telephone network and compatible switchboards, which support tone and pulse dialling and timed break recall. If in doubt please consult your service provider.

AEG

Inserting a pause

With some switchboards, after dialling the access code you may have to wait for a moment while the switchboard picks up an outside line so you will need to enter a pause in the dialing sequence.

Press and hold **Redial/Up** to insert a pause (P) before entering the telephone number.

You may also need to enter a pause when storing international numbers or charge card numbers.

Recall

You may need to use the recall function if you are connected to a switchboard/PBX (Private Branch Exchange), contact your PBX supplier for further information. The recall function is set to timed break recall.

AEG

ASISTANCE TECHNIQUE 

assistance@sopeg.fr

Ou

Au numéro suivant:

+ 33 (0)5-45-60-82-51



Service technique: assistance@sopeg.fr

ou

05-45-60-82-51 (prix d'un appel local)